

REVERSE HYPER (PL-PV2-RH)



POWER LEVERAGE V2

INSTALLATION MANUAL

REVERSE HYPER (PL-PV2-RH)



No.	Name	Unit	Qty.
1	shaft support component	pcs	1
2	elbow pad support component	pcs	1
3	footplate component	pcs	1
4	connector pipe 1	pcs	1
5	connector pipe 2	pcs	1

