


# 8800 Achieve Dual

Multi Press

# **Owner's Manual**

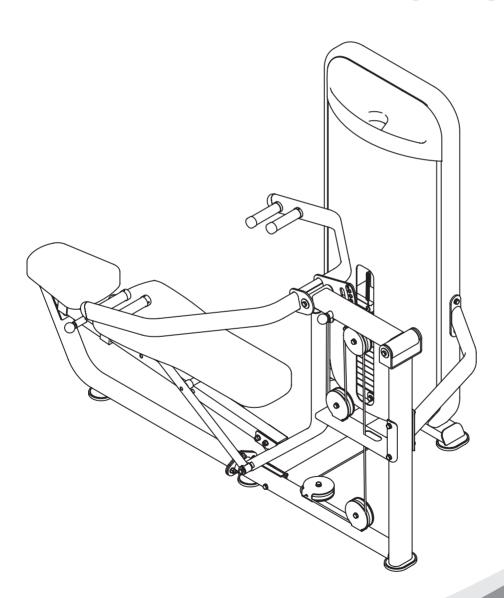

#### ! CAUTION

Read all precautions and instructions in this manual before using this equipment

## **CAUTION: THE UNIT MUST BE BOLTED TO THE FLOOR!!**

**CAUTION:** Read all precautions and instructions in this manual before using this equipment.

# Table Of Contents

| Important Safety Instructions   | 3  |
|---------------------------------|----|
| Instructions                    | 5  |
| Parts List                      | 6  |
| Exploded View                   | 7  |
| Measurement Guide               | 8  |
| Assembly Instructions           | 9  |
| Assembly                        | 10 |
| Adjust Instructions             | 17 |
| Maintenance Schedule            | 18 |
| General Maintenance Information | 19 |
| Weight Training Tips            | 20 |

# **Important Safety Instructions**

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

- 1. Read all instructions before using the equipment.

  These instructions are written to ensure your safety and to protect the unit.
- 2. Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.
- 3. The product should only be used on a level surface and is with 0.5 meters space around the product.

  Do not use the equipment outdoors.
- 4. Do not allow children on or near the equipment. And children are not allowed to use this equipment.
  - Teenagers should use this equipment with adult supervision.
- 5. Do not overexert yourself or work to exhaustion.
  Do not attempt to lift more weight than you can control safely.
  If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- 6. This equipment is not used as medical apparatus and instruments.
- 7. Never operate the unit when it has been dropped or damaged.

  Never drop or insert anything into any opening in the equipment.

  Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.

  Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear.

  Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
- 8. Be careful when getting on or off the equipment.
- 9. Wear proper exercise clothing and shoes for your workout, no loose clothing.


# **Important Safety Instructions**

#### **Personal Safety During Assembly**

Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.

Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

## **Training Area and Free Area**

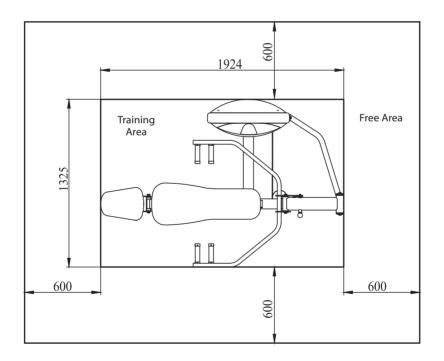

### **Specifications**

Class: S

Maximum User Weight: 150kg/330lbs Maximum Wt. Capacity: 113Kg/250lbs Product Total Surface: 1924\*1325 mm Product Total Mass: 111.5kg/246lbs

## Instructions

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

## **Tools Required**



Ratchet Wrench and Socket



Adjustable Wrench



Rubber Mallet



Hex Key Wrench Set



Phillips Screwdriver


# Parts List

#### NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED


| 2 E         | Main Frame Bace,Main Frame Rail Seat Roller Assembly | 1<br>1<br>1 | 38<br>39 | Back Pad                           | 1  |
|-------------|--|-------------|----------|------------------------------------|----|
| 3 F         | Rail<br>Seat Roller Assembly                         |             | 39       | C #00*#00*407                      |    |
| $\vdash$    | Seat Roller Assembly                                 | 1           |          | Grip Ф36*Ф28*127                   | 4  |
| 4 5         | ·  |             | 40       | Plug RT 30*70                      | 2  |
|             | D A A II   | 1           | 41       | 3.5" Pulley                        | 1  |
| 5 F         | Press Arm Assembly                                   | 1           | 42       | Cable                              | 1  |
| 6 L         | Load Arm Assembly                                    | 1           | 43       | Adjustable Plate                   | 1  |
| 7 F         | Frame Back   | 1           | 44       | Hex Head Bolt M12*145              | 1  |
| 8 5         | Strut Back Pad Frame                                 | 2           | 45       | Hex Head Bolt M10*130              | 2  |
| 9 E         | Brace Main Frame                                     | 1           | 46       | Hex Head Bolt M10*110              | 2  |
| 10 (        | Connector,Main Frame                                 | 1           | 47       | Hex Head Bolt M10*105              | 2  |
| 11 V        | Weight Stack Frame                                   | 1           | 48       | Hex Head Bolt M10*75               | 2  |
| 12 7        | Top Front Shroud                                     | 1           | 49       | Hex Head Bolt M10*65               | 5  |
| 13 7        | Top Rear Shroud                                      | 1           | 50       | Hex Head Bolt M10*60               | 1  |
| 14 <i>A</i> | Axle Ф25.4*Ф12.5*114                                 | 1           | 51       | Hex Head Bolt M10*50               | 7  |
| 15 <i>A</i> | Axle Φ25.4*130                                       | 1           | 52       | Hex Head Bolt M10*45               | 1  |
| 16          | Guide Rod  | 2           | 53       | Hex Head Bolt M10*40               |    |
| 17 L        | Limited Station Axle Φ25*124                         | 1           | 54       | Hex Head Bolt M10*30               |    |
| 18 <i>A</i> | Axle Ф25.4*158                                       | 1           | 55       | Hex Head Bolt M10*25               |    |
| 19 L        | Long Pop Pin   | 1           | 56       | Socket Head Cap Screw M10*25       |    |
| 20 F        | Pop Pin  | 1           | 57       | Socket Set Screw 10-32*3.2         | 16 |
| 21 7        | Top Plate  | 1           | 58       | Flat Head Cap Screw M5*10          | 2  |
| 22 E        | Bushing Ф20*Ф25*12                                   | 8           | 59       | Pan Head Phillips Screw M5*15      | 8  |
| 23          | Selector Pin W/Coil                                  | 1           | 60       | Nylon lock Nut M10                 | 22 |
| 24 (        | Oval Fixed Plate                                     | 1           | 61       | Nylon lock Nut M12                 | 1  |
| 25 F        | Pulley Prevent Bracket                               | 1           | 62       | Washer Φ38*11*2                    | 4  |
| 26 V        | Weight Rubber Bumper                                 | 4           | 63       | Washer Ф20*Ф11*1.5                 | 55 |
| 27 F        | Foot Pad   | 5           | 64       | Washer Ф26*Ф13*1.5                 | 2  |
| 28 E        | Bottom Front Shroud                                  | 1           | 65       | Washer Φ30*11*2                    | 6  |
| 29 E        | Bottom Rear Shroud                                   | 1           | 66       | Hex Head Bolt M10*50 (Whole Screw) | 2  |
| 30 4        | 4.5" Pulley  | 6           | 67       | U-Style Tapped Hole NutM5          | 4  |
| 31 F        | Rubber Bumper Ф45*16.5                               | 1           | 68       | Guide Rubber Bumper                | 4  |
| 32 7        | T type Bearing                                       | 2           | 69       | Ф32 End Cap                        | 4  |
| 33 F        | Plug 40*80*20  | 2           | 70       | Ф32 Ring                           | 4  |
| 34 L        | Limited Station Axle Rubber                          | 1           | 71       | Bushing Ф10*Ф14*20                 | 1  |
| 35 E        | Bushing Ф38*Ф25.4*18                                 | 4           | 72       | Lube                               | 1  |
| 36 F        | Plastic Tube Guide                                   | 2           | 73       | S=8 Hex Key                        | 1  |
| 37 5        | Seat Pad   | 1           | 74       | Cable End                          | 1  |

<sup>!</sup> There are two configuration of weights: 250LBS(sixteen 15LBS Weight Plate) and 170LBS(sixteen 10LBS Weight Plate), please see following form for details.

# **Exploded View**

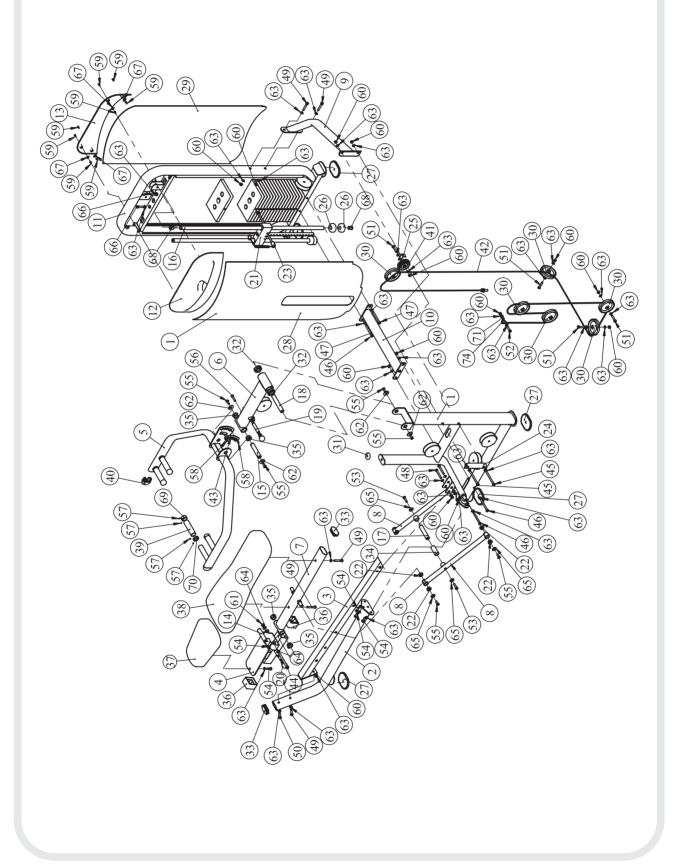

# Measurement Guide

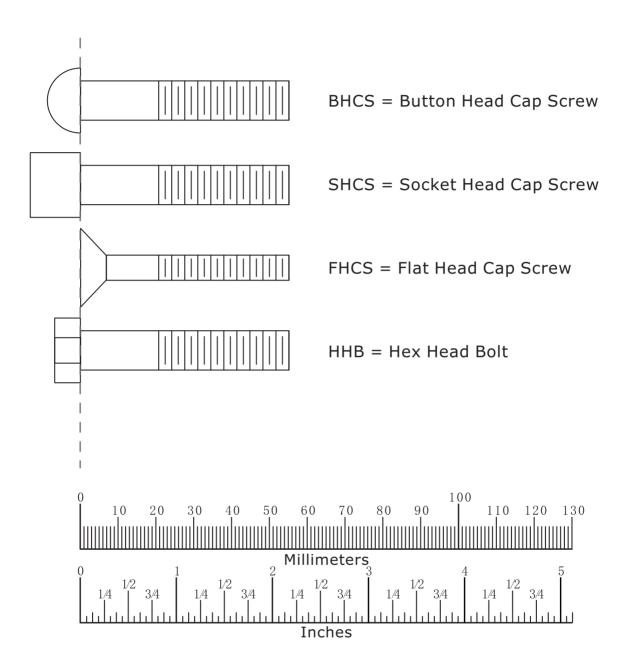

| Diameter of bolt (mm/inch)              | M6(1/4")                  | M8(5/16")                                   | M10(3/8")                      | M12(1/2")                                    | M16(5/8")         |
|---|---------------------------|---|--------------------------------|--|-------------------|
| Tightening<br>torque (N.m)              | 9~12                      | 22~30                                       | 45~59                          | 78~104                                       | 193~257           |
| Operational<br>methods for<br>adult men | The strength of the wrist | The strength of<br>the wrist and<br>forearm | The strength of the entire arm | The strength of<br>the arm and<br>upper body | with all strength |

## **Assembly Instructions**

Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assemble the equipment by professional installers. You may find it quicker, safer, easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.

# **⚠** NOTE

As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

### Step 1

1. Attach Connector, the Main Frame (#10) to the Weight Stack Frame (#11) using:

two M10\*105 HHB (#47)

four Φ20\*Φ11\*1.5 Washer (#63)

two M10 Nylon lock Nut (#60)

2. Attach the Brace Main Frame (#9) to the Weight Stack Frame (#11) using: two M10\*65 HHB (#49) four Φ20\*Φ11\*1.5 Washer (#63) two M10 Nylon lock Nut (#60)

3. Attach the Main Frame (#1) to Connector, the Main Frame (#10), the Brace Main Frame (#9) using:

one Oval Fixed Plate (#24)


two M10\*130 HHB (#45)

two M10\*110 HHB (#46)

eight Φ20\*Φ11\*1.5 Washer (#63)


four M10 Nylon lock Nut (#60)

4. Attach the Bace, Main Frame (#2) to the Main Frame. using:

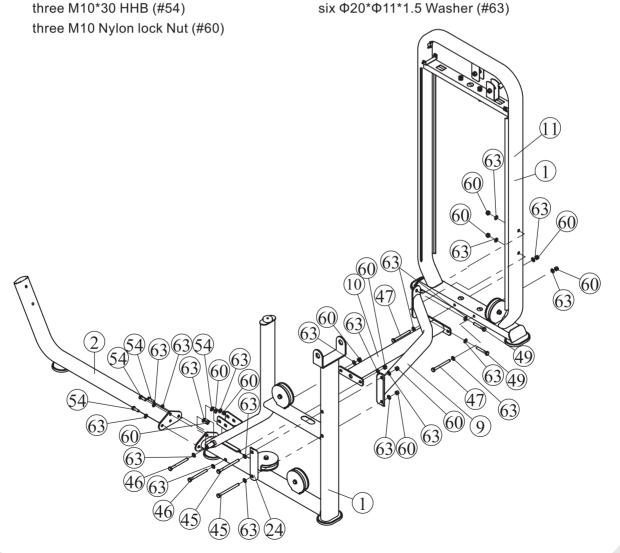

### Step 2

- 1. Attach the Seat Roller Assembly (4#) to the Rail (#3).
- 2. Attach the Rail (#3) to the Bace, Main Frame (#2), the Main Frame (#1). using: two M10\*75 HHB (#48) one M10\*60 HHB (#50) one M10\*65 HHB (#49) seven Φ20\*Φ11\*1.5 Washer (#63) three M10 Nylon lock Nut (#60)
- 3. Attach the Seat Pad (#37) to the Seat Roller Assembly (#4). using: two M10\*30 HHB (#54) two Φ20\*Φ11\*1.5 Washer (#63)
- 4. Attach the Frame Back (#7) to the Seat Roller Assembly (#4). using: one Φ25.4\*Φ12.5\*114 Axle (#14) one M12\*145 HHB (#44) two Φ26\*Φ13\*1.5 Washer (#64)
- 5. Attach two Strut Back Pad Frames (#8) to Main Frame (#1), Frame Back (#7). using:
  - one Φ25\*124 Limited Station Axle (#17) two M10\*40 HHB (#53) six M10\*25 Hex Head Bolt (#55) six Φ30\*11\*2 Washer (#65)
- 6. Attach the Back Pad (#38) to theFrame Back (#7). using: two M10\*65 HHB (#49) two Φ20\*Φ11\*1.5 Washer (#63)

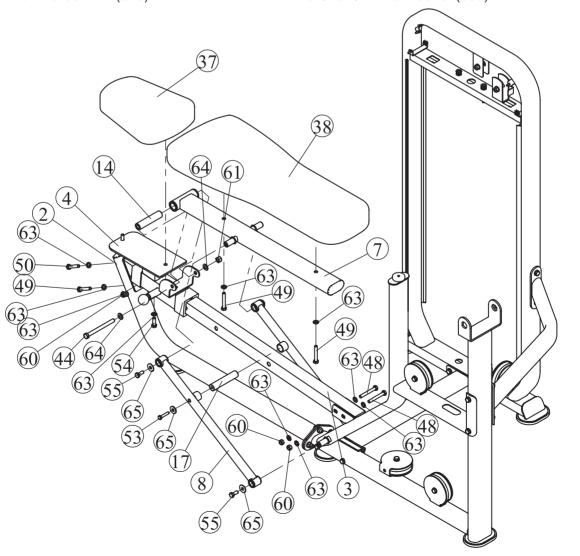


### Step 3

1. Attach the Load Arm Assembly (#6) to the Main Frame (#1). using: one Φ25.4\*158 Axle (#18) two M10\*25 HHB (#55) two Φ38\*11\*2 Washer (#62)

2. Attach the Press Arm Assembly (#5) to the Load Arm Assembly (#6) using: one Φ25.4\*130 Axle (#15) two M10\*25 HHB (#55)

two Φ38\*11\*2 Washer (#62)


two M10\*25 HHB (#55) one M10\*25 SHCS (#56)

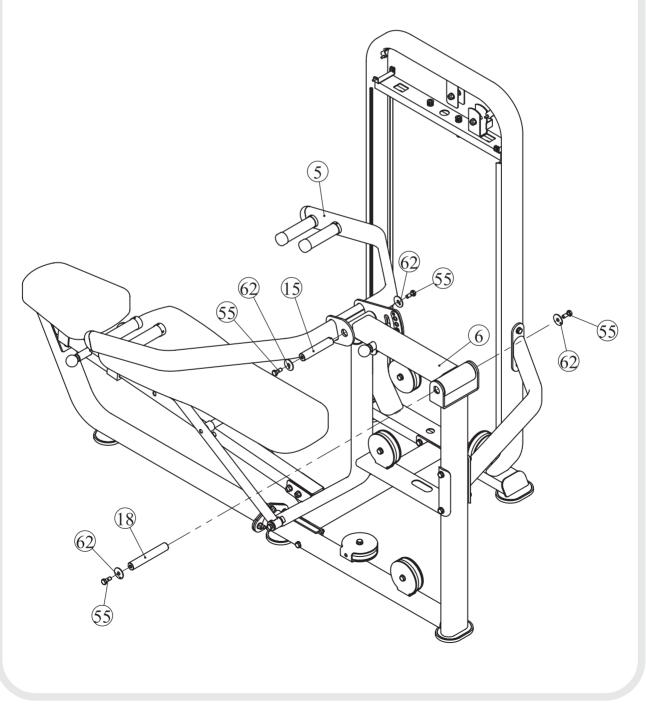

### Step 4

- 1. Attach four Weight Rubber Bumpers (#26) two Guide Rods (#16) to Weight Stack Frame (#11).
- 2. Attach sixteen Weight Plate.
- 3. Attach one Top Plate (#21) and the Selector Pin W/Coil (#23).
- 4. Fix two Guide Rods (#16) to Weight Stack Frame (#11) using: two M10\*50 (Whole Screw) HHB (#66) two Φ11\*Φ20\*1.5 Washer (#63)


! There are two configuration of weights: 250LBS(sixteen 15LBS Weight Plate) and 170LBS(sixteen 10LBS Weight Plate), please see following form for details.

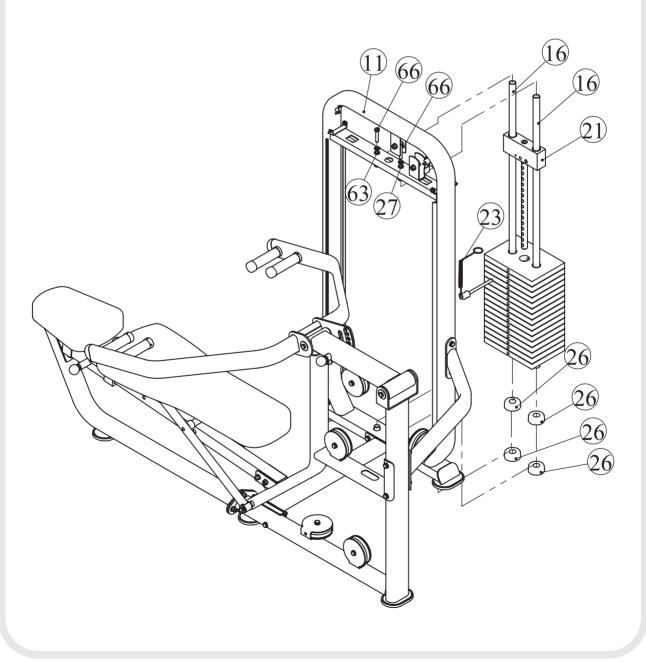

### Step 5-1

#### Note:

- 1. First attach Cable End to the Cable.
- 2. Second attach Bushing to the Cable End.
- 3. Then attach Cable End to the frame using: one Hex Head Bolt M10\*45 one Nylon lock Nut M10 two Washer Φ20\*Φ11\*1.5

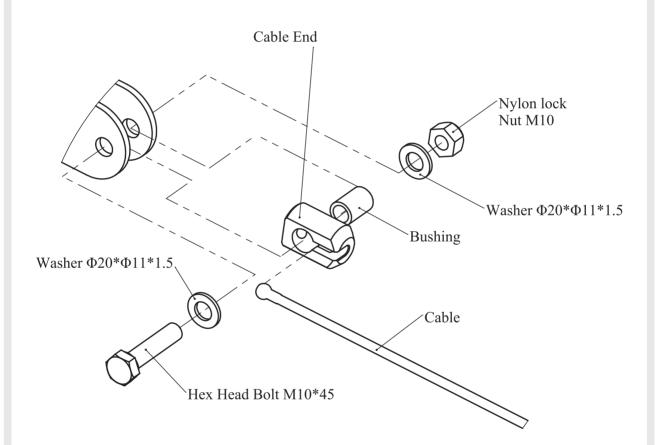

#### **Step 5-2**

- 1. Attach the Cable (#42) to the Top Plate (#31).
- 2. Attach one 4.5" Pulley (#30) to the Weight Stack Frame (#11) top side. using: one M10\*50 HHB (#51) two Φ11\*Φ20\*1.5 Washer (#63) one M10 Nylon lock Nut (#60)
- 3. Attach one 3.5" Pulley (#41) to the Weight Stack Frame (#11) top side. using: one Pulley Prevent Bracket (#25) one M10\*50 HHB (#51) two Φ11\*Φ20\*1.5 Washer (#63) one M10 Nylon lock Nut (#60)
- 4. Attach one 4.5" Pulley (#30) to the Weight Stack Frame (#11) bottom side. Using:


one M10\*50 HHB (#51) two Φ11\*Φ20\*1.5 Washer (#63) one M10 Nylon lock Nut (#60)

5. Attach four 4.5" Pulley (#30) to the Main Frame (#1). using: four M10\*50 HHB (#51) eight Φ11\*Φ20\*1.5 Washer (#63) four M10 Nylon lock Nut (#60)

6. Attach the Cable (#42) end to the Main Frame (#1) using: one Φ10\*Φ14\*20 Bushing (#71) one M10\*45 HHB (#52) two Φ11\*Φ20\*1.5 Washer (#63) one M10 Nylon lock Nut (#60) one Cable End (#74) 63(60)6074 63 62 6360(51) 30

### Step 6

- 1. Attachthe Bottom Front Shroud (#28) and Bottom Rear Shroud (#29) to the Weight Stack Frame (#11).
- 2. Attach the Top Front Shroud (#12) to the Weight Stack Frame (#11) using: four M5\*15 P HPS (#59)
- 3. Attach the Top Rear Shroud (#13) to the Weight Stack Frame (#11) using: four M5 U-Style Tapped Hole Nut (#67) four M5\*15 PHPS (#59) two M10\*30 BHCS (#47)

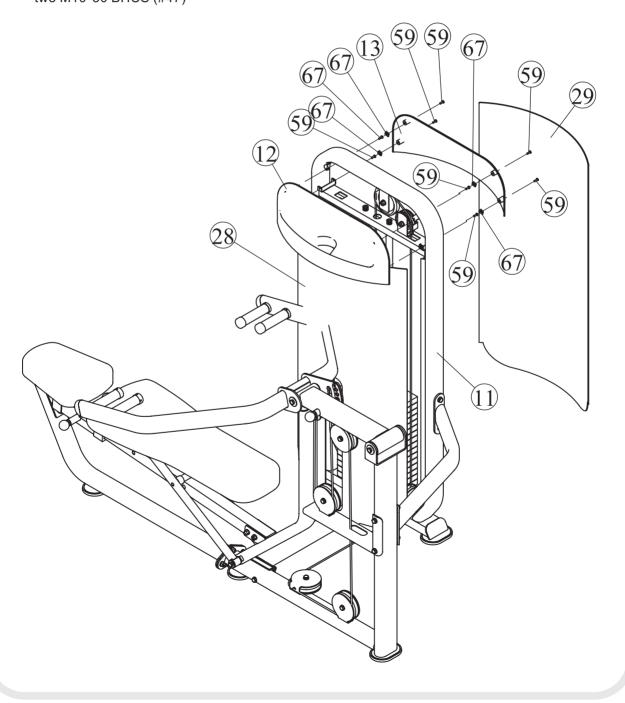

# **Adjust Instructions**

## **Back Pad adjustment**


- 1. Pull the Pull Pin and adjust the Back Pad to the desired position.
- 2. Make sure that the Pull Pin gets into the hole completely.

## **Press Arm adjustment**

- 1. Pull the Long Pull Pin and adjust the Press Arm to desired position.
- 2. Make sure that the Long Pull Pin gets into the hole completely.

### The use of Selector Pin

- 1. Select an appropriate weight and put the Selector Pin into the hole on it.
- 2. Make sure that the Selector Pin gets into the hole completely.

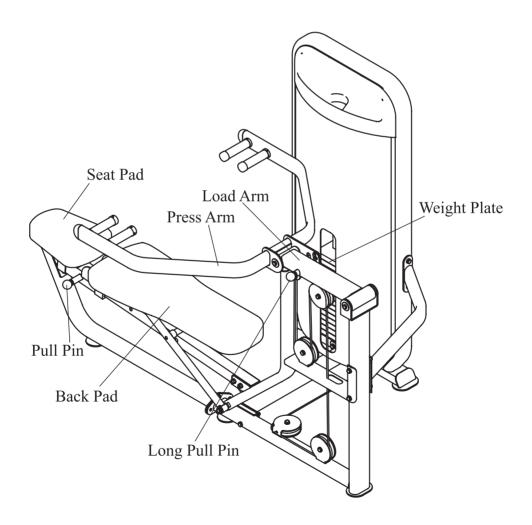

# Maintenance Schedule

| ROUTINE  | COMMERCIAL<br>MAINTENANCE | HOME<br>MAINTENANCE | LATEST DATE ENTRY |  |  |  |  |  |
|--|---------------------------|---------------------|-------------------|--|--|--|--|--|
| Inspect;<br>Links, Pull Pins, Snap Locks,<br>Swivels, Weight Stack Pins              | DAILY                     | WEEKLY              |                   |  |  |  |  |  |
| Clean;<br>Upholstery   | DAILY                     | WEEKLY              |                   |  |  |  |  |  |
| Inspect;<br>Cables or Belts and their tension  | DAILY                     | WEEKLY              |                   |  |  |  |  |  |
| Inspect;<br>Accessory Bars, and Handles  | WEEKLY                    | 3 MONTHS            |                   |  |  |  |  |  |
| Inspect;<br>All Decals   | WEEKLY                    | 3 MONTHS            |                   |  |  |  |  |  |
| Inspect;<br>All Nuts and Bolts, Tighten if<br>needed                                 | WEEKLY                    | 3 MONTHS            |                   |  |  |  |  |  |
| Inspect;<br>Anti-Skid Surface  | WEEKLY                    | 3 MONTHS            |                   |  |  |  |  |  |
| Clean & Lubricate;<br>Guide Rods with a Teflon (PTFE)<br>based lubricant (Superlube) | MONTHLY                   | 3 MONTHS            |                   |  |  |  |  |  |
| Lubricate;<br>Seat Sleeves, Turcite Bushings,<br>Linear Bearing                      | MONTHLY                   | 3 MONTHS            |                   |  |  |  |  |  |
| Clean and Wax;<br>All Glossy Finishes  | 6 MONTHS                  | YEARLY              |                   |  |  |  |  |  |
| Repack with Grease;<br>Linear Bearings   | 6 MONTHS                  | YEARLY              |                   |  |  |  |  |  |
| Replace;<br>Cables, Belts and Connecting<br>Parts                                    | YEARLY                    | 3 YEARS             |                   |  |  |  |  |  |

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

## **General Maintenance Information**

#### Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- \* Check all pieces for signs of visible wear or damage.
- \* Check springs in snap hooks and pull-pins for proper tension and alignment.
- \* If the spring sticks or has lost its rigidity, replace it immediately.

#### **Upholstery:**

- \* To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- \* Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- \* Replace ripped or warn upholstery immediately.
- \* Keep sharp or pointed objects clear of all upholstery.

#### **Decals:**

\* Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

#### **Nuts and Bolts:**

- \* Inspect all nuts and bolts for any loosening and tighten if needed.
- \* Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

#### **Anti-Skid Surfaces:**

\* These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

#### **Belts and Cables:**

- \* We uses only high quality belt, and mil-spec cables.
- \* Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- \* While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- \* Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

#### **Belt and Cable Tension:**

- \* Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- \* Check slack in cables and re-adjust cable tension if needed.

#### **Seat Sleeves, Guide Rods:**

- \* Wipe down adjusting tubes with a dust free rag before applying lubricant.
- \* Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

#### **Linear Bearings:**

\* Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

#### PLEASE KEEP THIS FOR YOUR RECORDS

## Weight Training Tips

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.







